



INSTALL R CHANNEL(S) AS SHOWN.
INSTALL SCREWS EVERY 24" OC
LOWER PANEL TO HAVE R CHANNEL
TOWARDS OUTSIDE. UPPER PANEL
TO HAVE R CHANNEL TOWARDS INSIDE.
USE #27 DRILL FOR PRE-DRILLING

NOTICE:

REVIEW AND UNDERSTAND ALL ASSOCIATED PAGES PRIOR TO CALCULATING ANY MANUFACTURE SIZES. R CHANNEL USE WILL AFFECT ALL PRODUCTION SIZES REQUIRED. ALSO REVIEW ALL STANDARD GUIDELINES FOR IMPORTANT INFORMATION, RESTRICTIONS, LIMITATIONS, AND RECOMMENDATIONS CONCERNING THIS EXTRUSION AND ITS USE. THIS PARTICULAR USAGE SUGGESTION MAY NEED TO BE MODIFIED FOR YOUR APPLICATION. IN ALL CASES, BE SURE TO CONSULT AND FOLLOW ALL LOCAL BUILDING CODES.

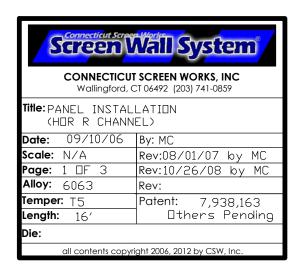

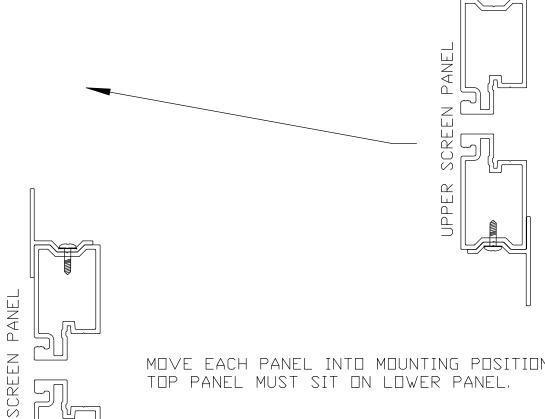

LUWER

MOVE EACH PANEL INTO MOUNTING POSITION. TOP PANEL MUST SIT ON LOWER PANEL.

